

# ASSEMBLING A COUNTERFRAME FOR PLASTERBOARD WALLS



## PHASE 1

Open the Eclipse kit with care. Do not throw the polystyrene away you will need it later.




## PHASE 2

The frame is set to give you a finished wall thickness of 100mm, a kit is available for 125mm.



## PHASE 3

Take out the Front (A) and rear (C) uprights.

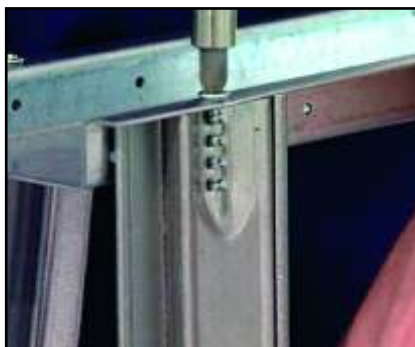

## PHASE 4

Take two of the Horizontal bars (B) and attach them to the bottom of the uprights using the screws provided.




## PHASE 5

Attaching the bottom Horizontal bars (C).



## PHASE 6

Attach Top section (D) using the screws provided.

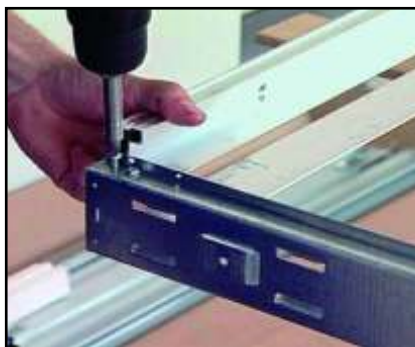

## PHASE 7

Attaching the Top section (D) to the uprights.




## PHASE 8

Locate and attach the remaining horizontal bars (C).



## PHASE 9

Close-up of the fixing to the Horizontal bars (C).

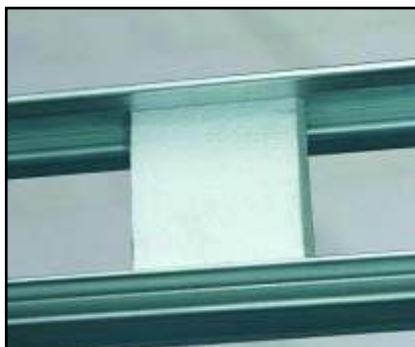

## PHASE 10

Snap the polystyrene bars at their pre-cut positions, slot two together and insert them between the Horizontal bars (C),



## PHASE 11

Note the running track (E) has two extra large holes and the steel section has two recessed holes, these are for use when attaching the frame to the stud.



## PHASE 12

Insert the Alloy end of the Running Track (E) into the Top section (D).



COUNTERFRAMES FOR POCKET DOOR SYSTEMS

Em-B Solutions Ltd

42-44 Burley Road, Leeds West Yorkshire, LS3 1JX

Tel : 0113 245 9559

Fax : 0113 245 9779

Email : [info@em-b.co.uk](mailto:info@em-b.co.uk)

[www.em-b.co.uk](http://www.em-b.co.uk)



### PHASE 13

Locate the Running Track (E) in the Top section (D) using the protrusions on the track and sliding them into the slots as shown above.



### PHASE 14

The end clip should locate fully on the small notch on the Running track (E), then use the screws provided to fix together.




### PHASE 15

Screwing the running track (E) and the top section (D) together.



### PHASE 16

Take the end post (F) and locate on the running track (E)

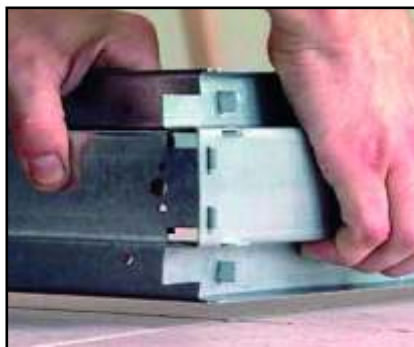

### PHASE 17

Detail of the interconnecting tongues.



### PHASE 18

Hammer the tongues over securely to attach the end post (F) to the running track (E).



### PHASE 19

Use the two temporary spacers (G), located in the slots provided to hold the end post in place.



### PHASE 20

If you are using a wooden stud then attach the two bottom fixing brackets to the lower horizontals, these are used to attach the frame to the floor.



### PHASE 21

Insert the assembled frame into the stud wall.



### PHASE 22

It is absolutely necessary that your frame is vertical so check with a plumb line before and after locating.



### PHASE 23

To locate your frame to the top of your stud work you must ONLY use the larger holes in the alloy running track and the two recessed holes in the steel section (see phase 11)



### PHASE 24

The installed frame.



COUNTERFRAMES FOR POCKET DOOR SYSTEMS

Em-B Solutions Ltd

42-44 Burley Road, Leeds West Yorkshire, LS3 1JX

Tel : 0113 245 9559

Fax : 0113 245 9779

Email : [info@em-b.co.uk](mailto:info@em-b.co.uk)

[www.em-b.co.uk](http://www.em-b.co.uk)